

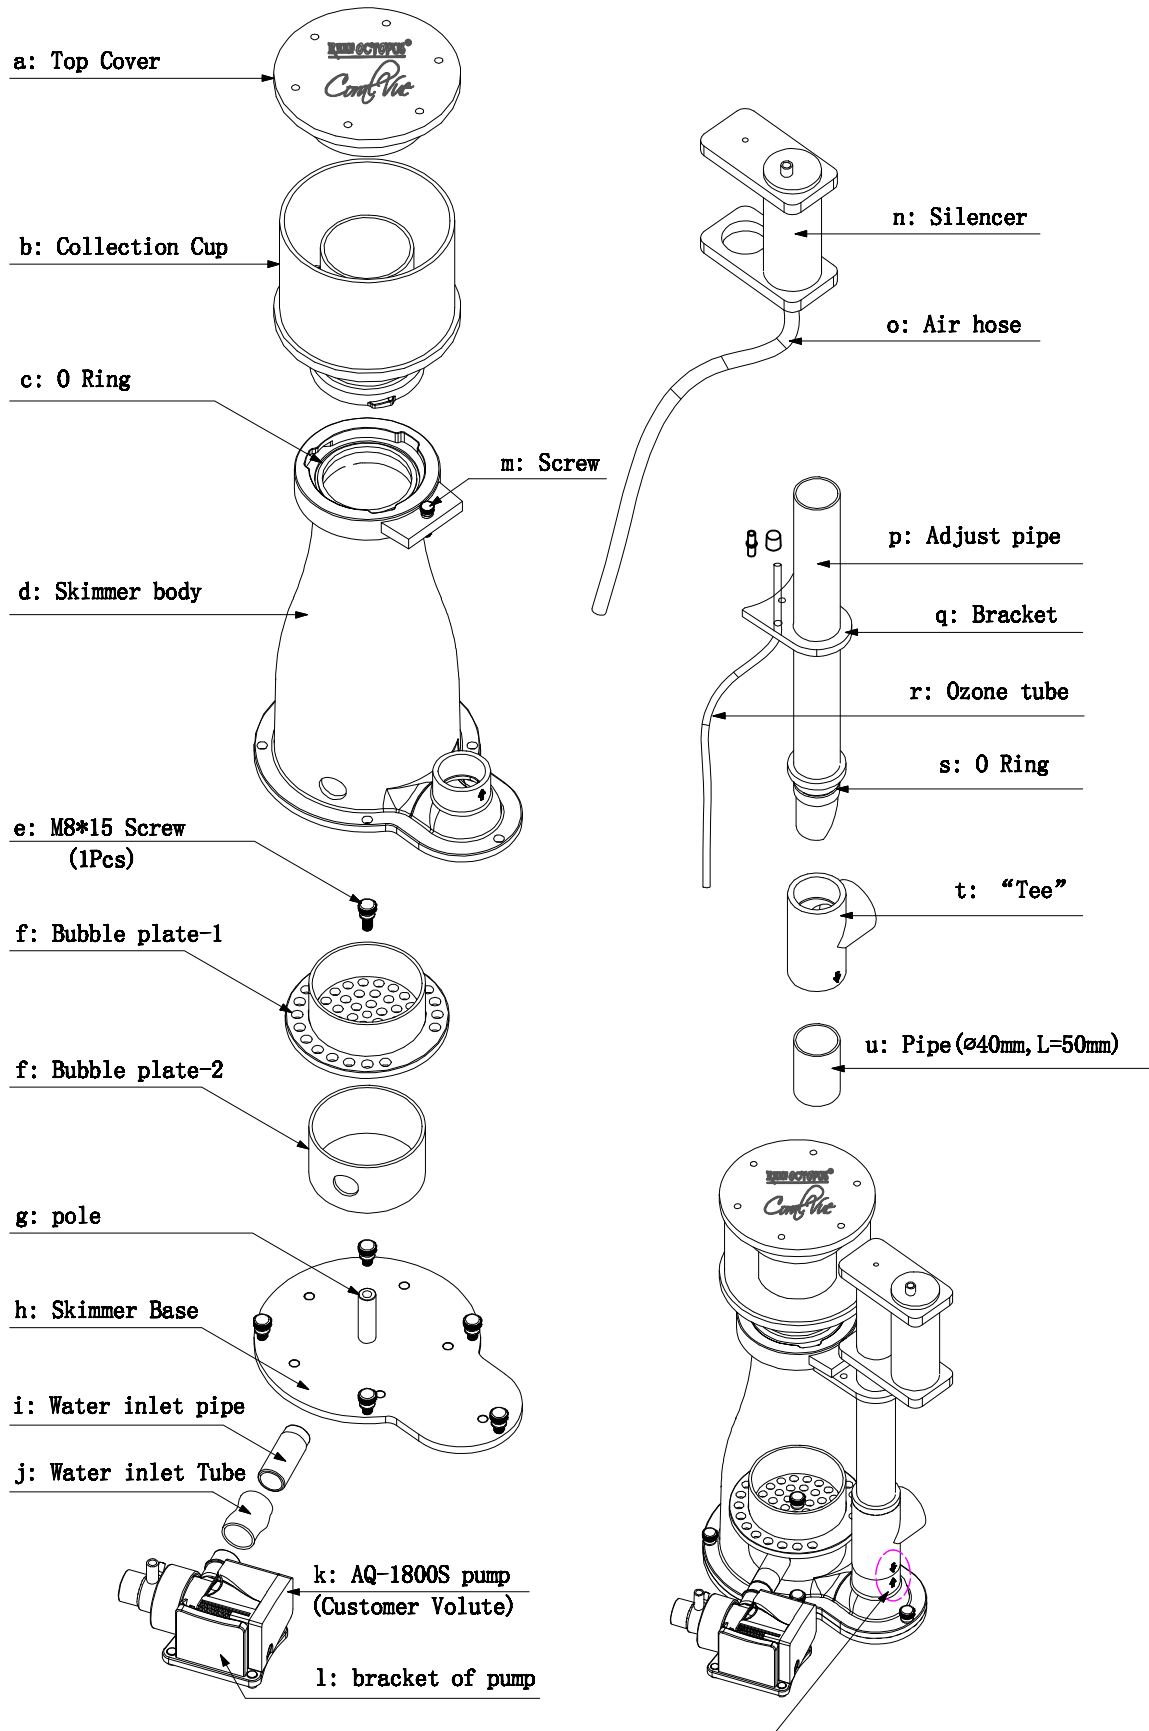


# Prime-150INT

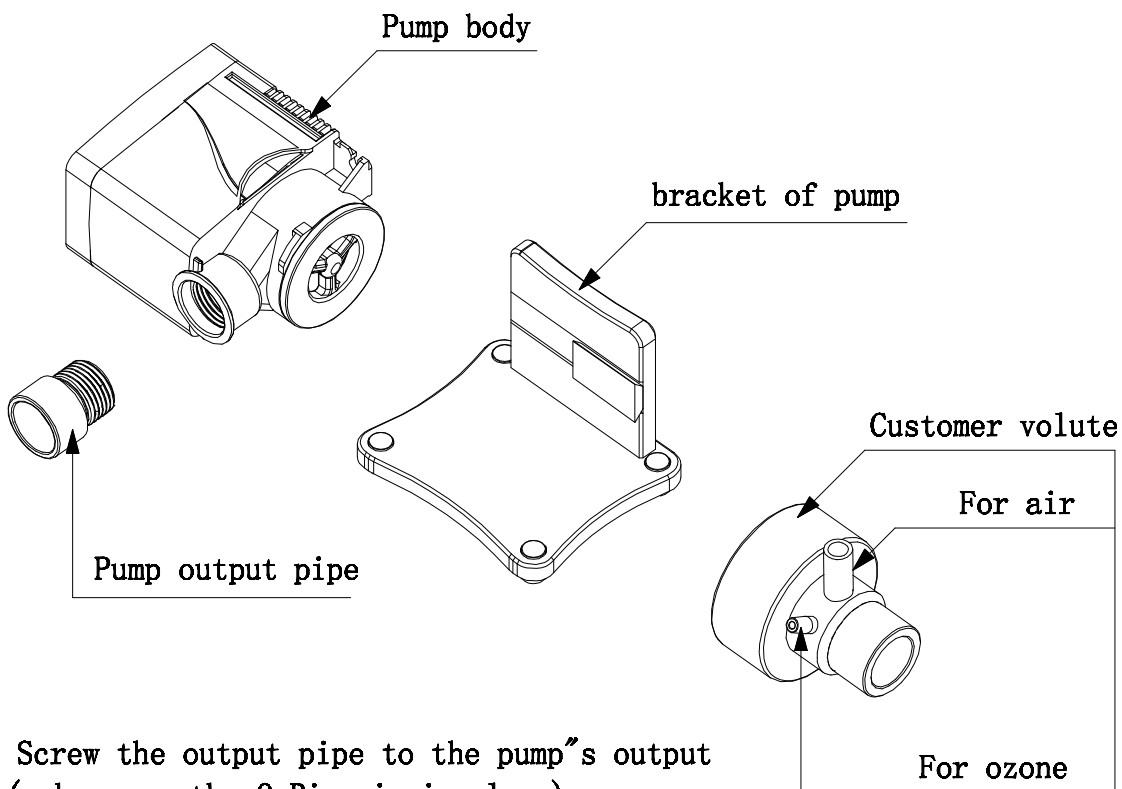

Please install "Tee" , according to the direction of!

# Prime-150INT

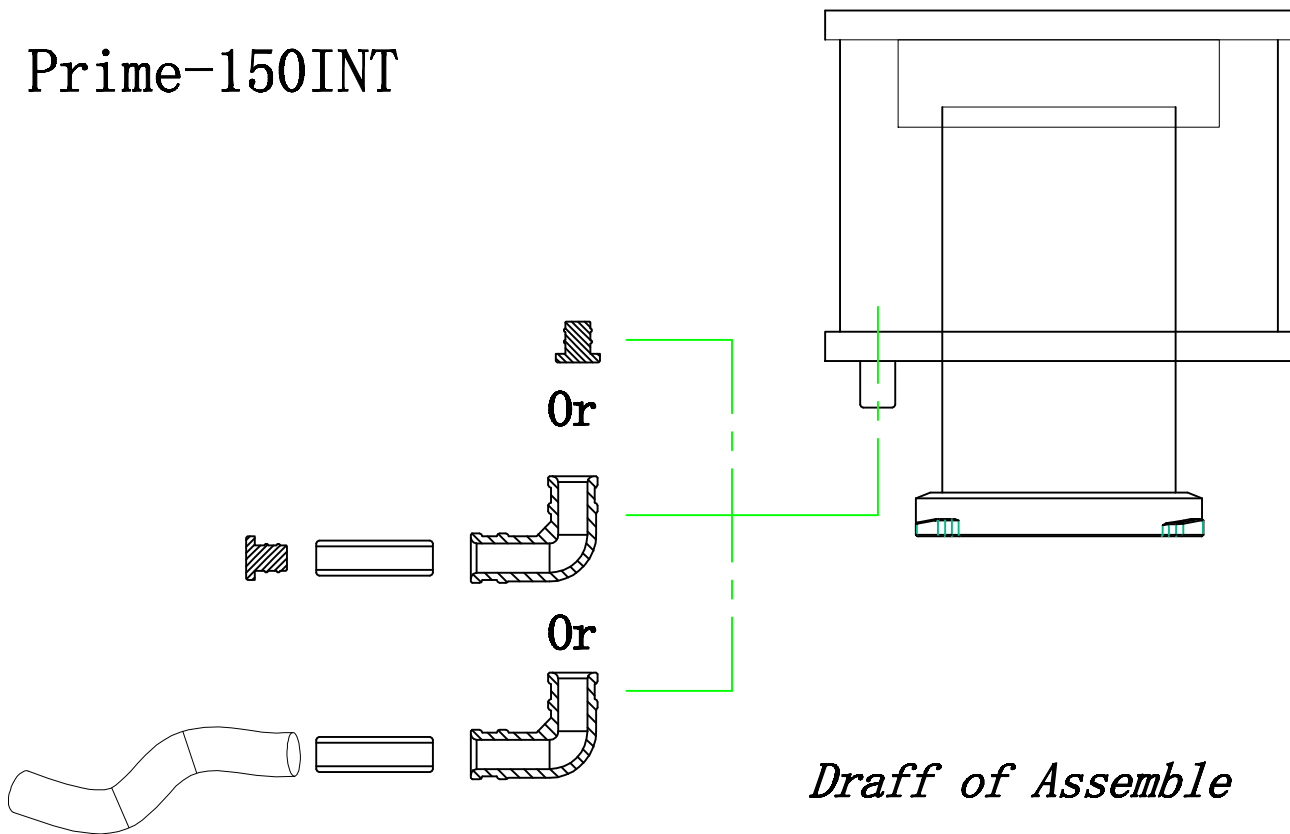

1. Screw the output pipe to the pump's output  
(make sure the O Ring is in place)
2. push pump body onto bracket
3. Installed (rotation) the customer volute to pump body

*AQ-1800S customer volute pump Assemble*